
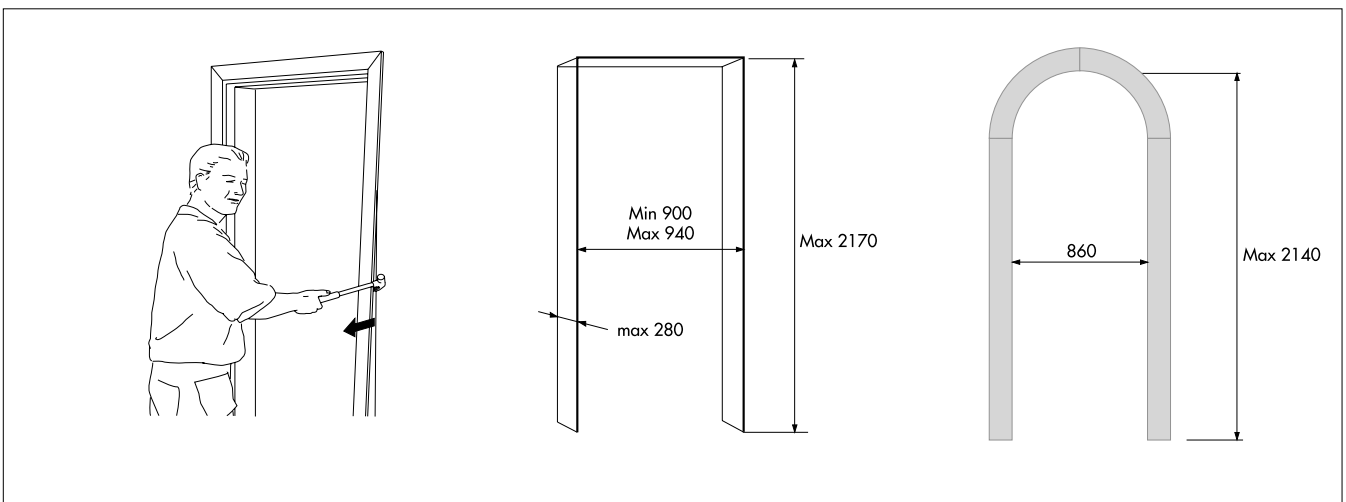
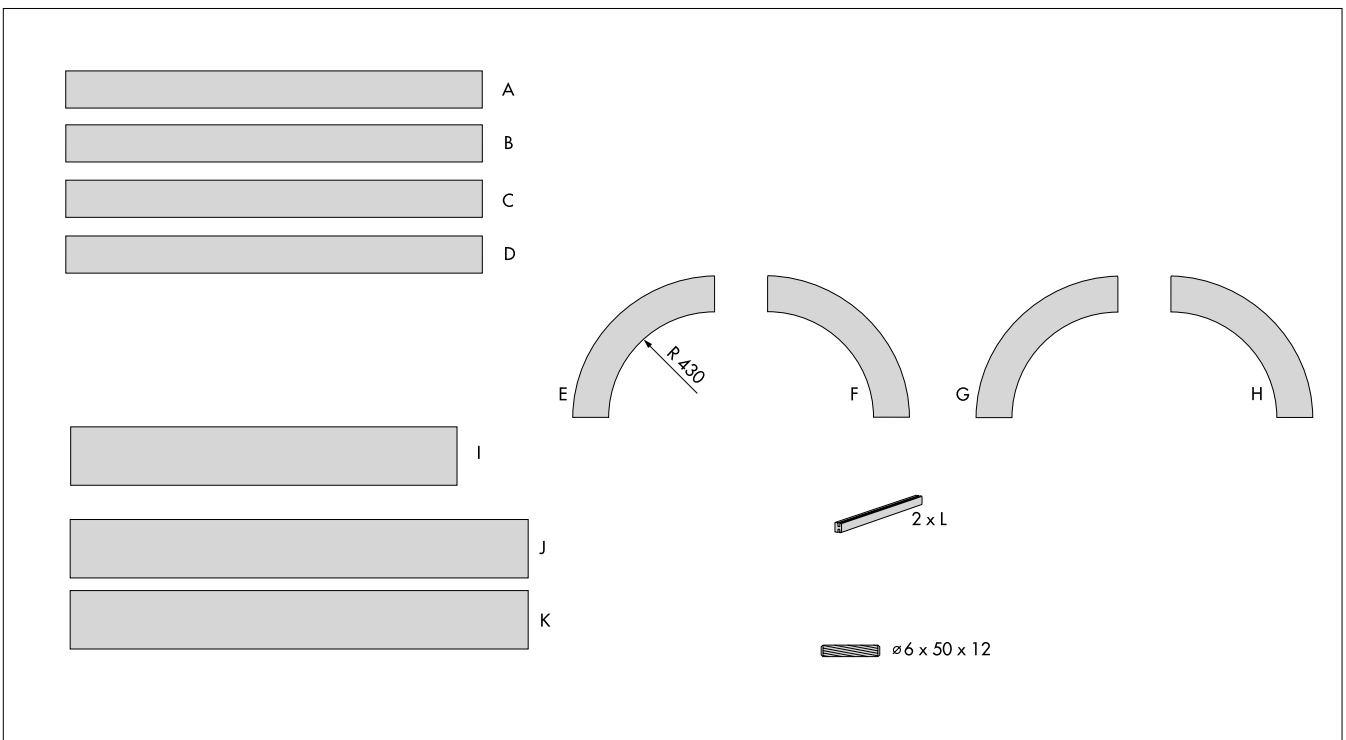
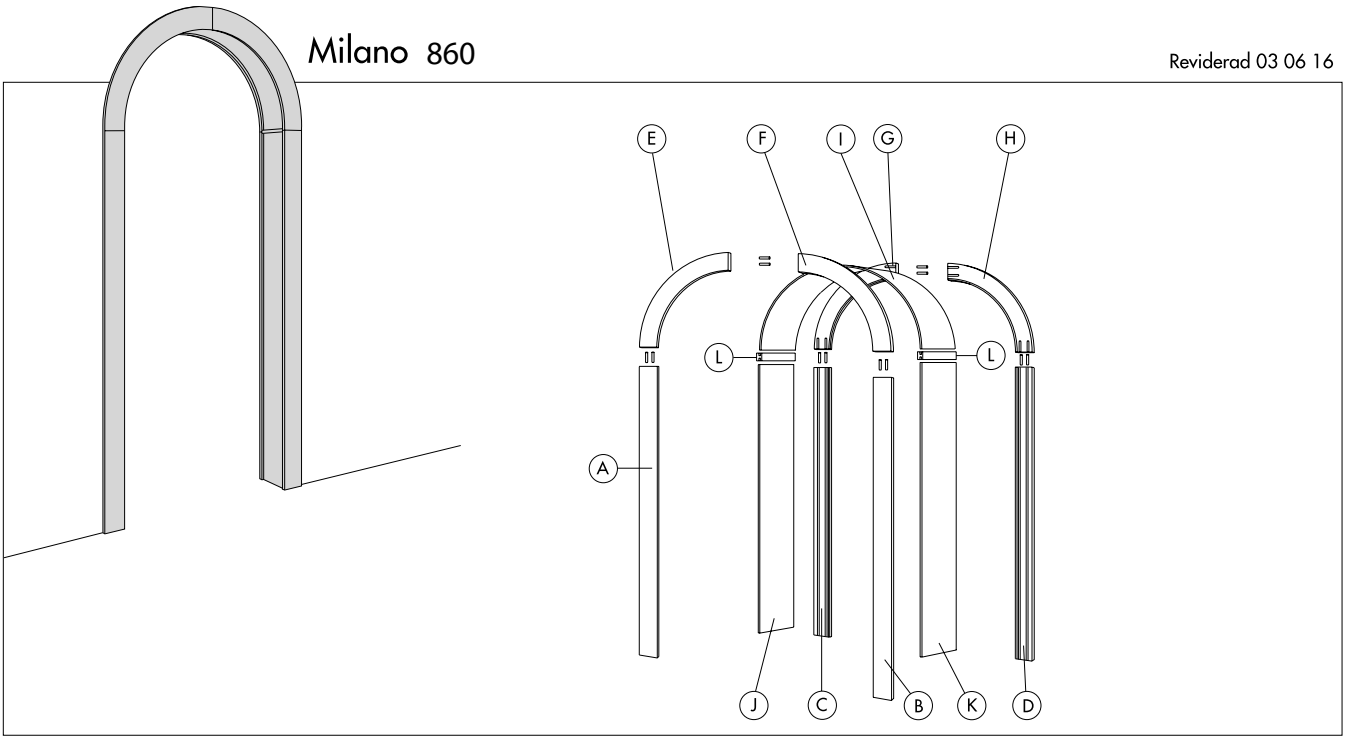


# Ny monteringsanvisning! New assembly instruction! Neues montageanleitung!







Milano 860

Reviderad 03 06 16





 = mm

Milano

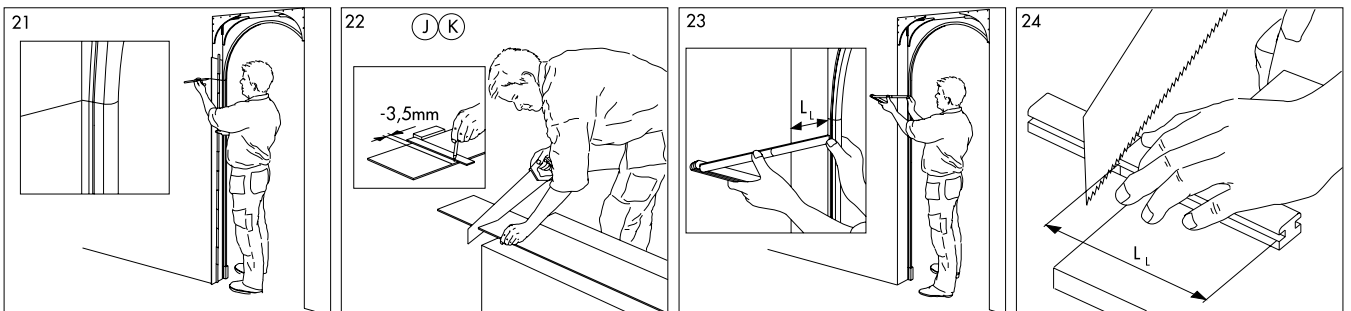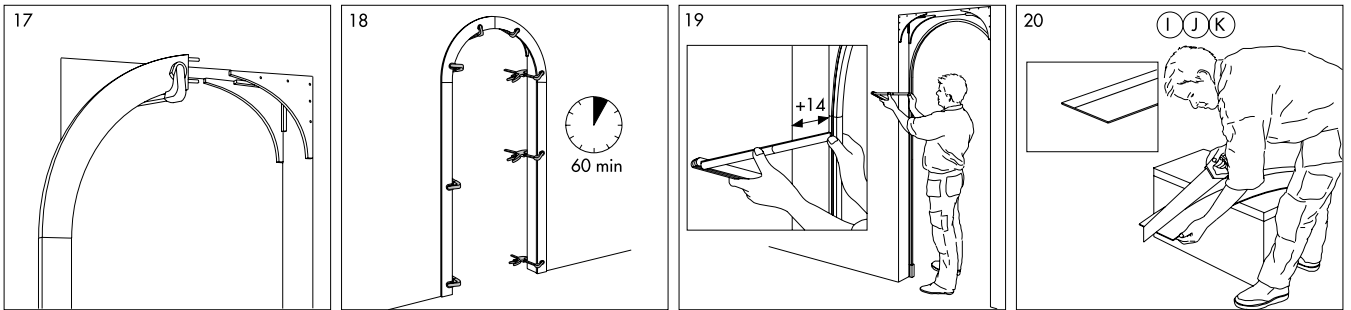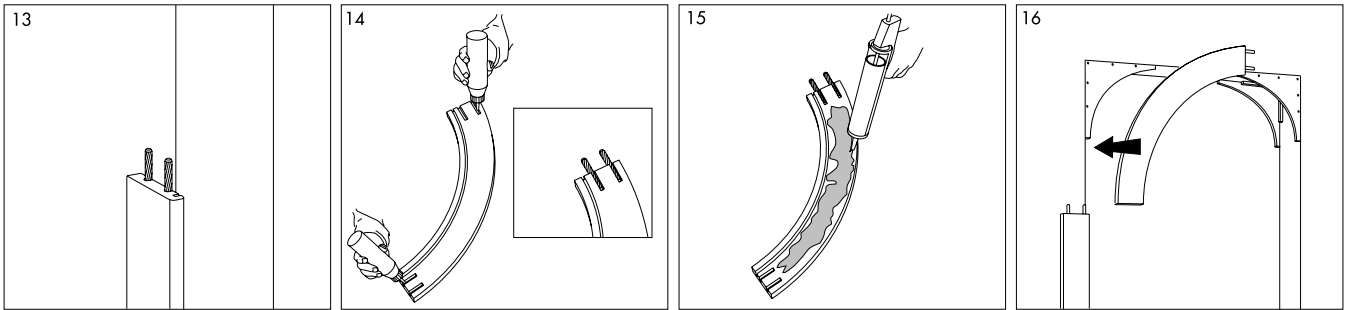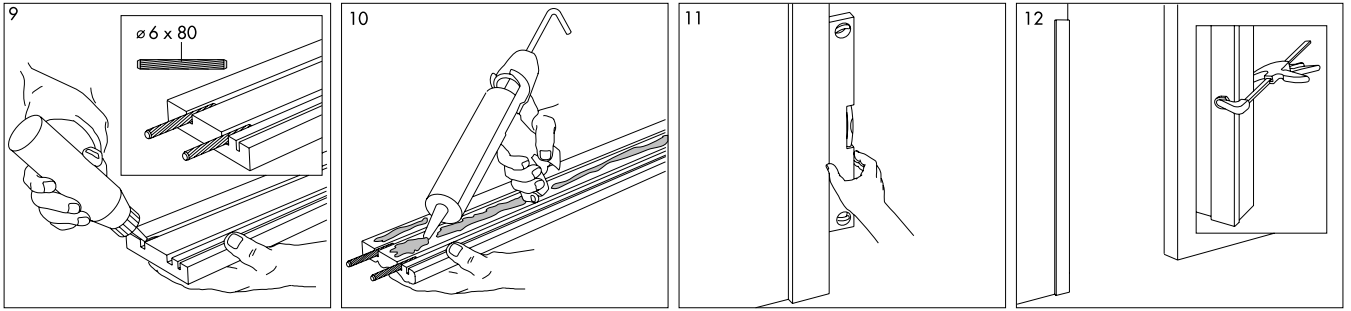
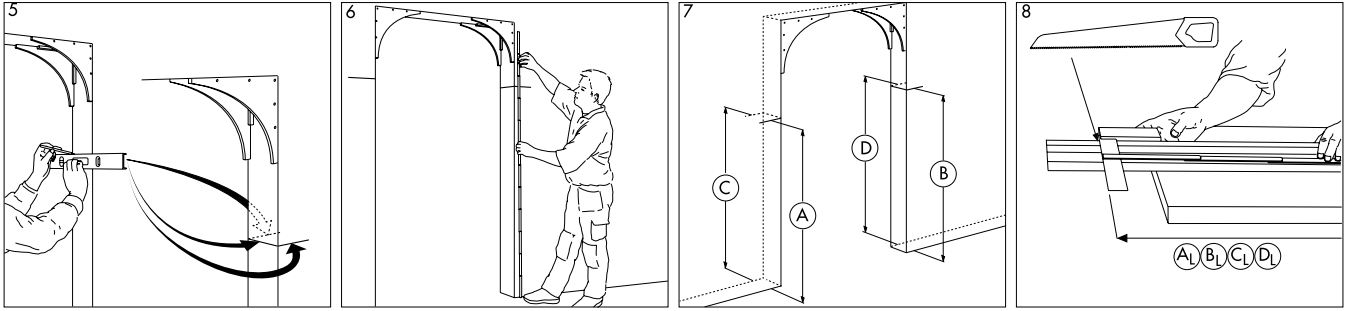
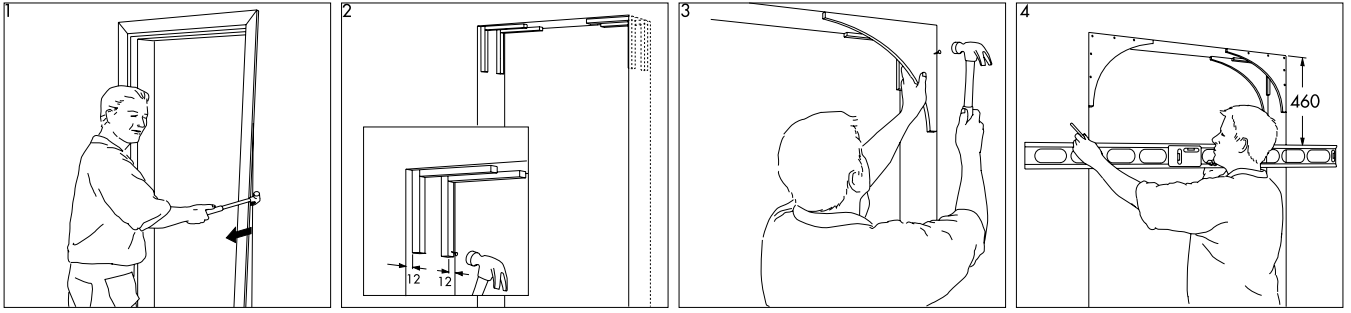



# Milano

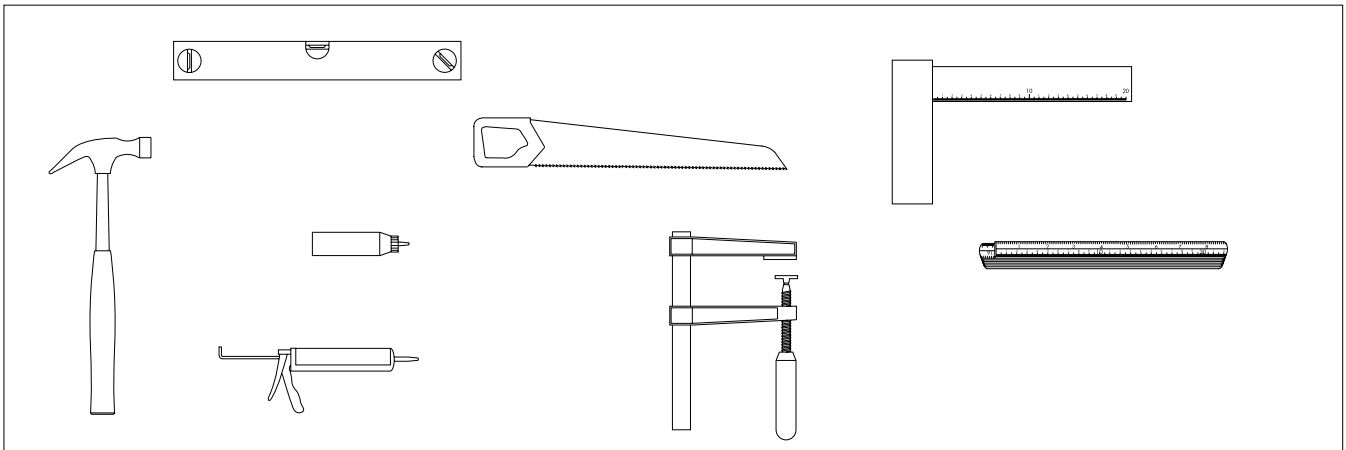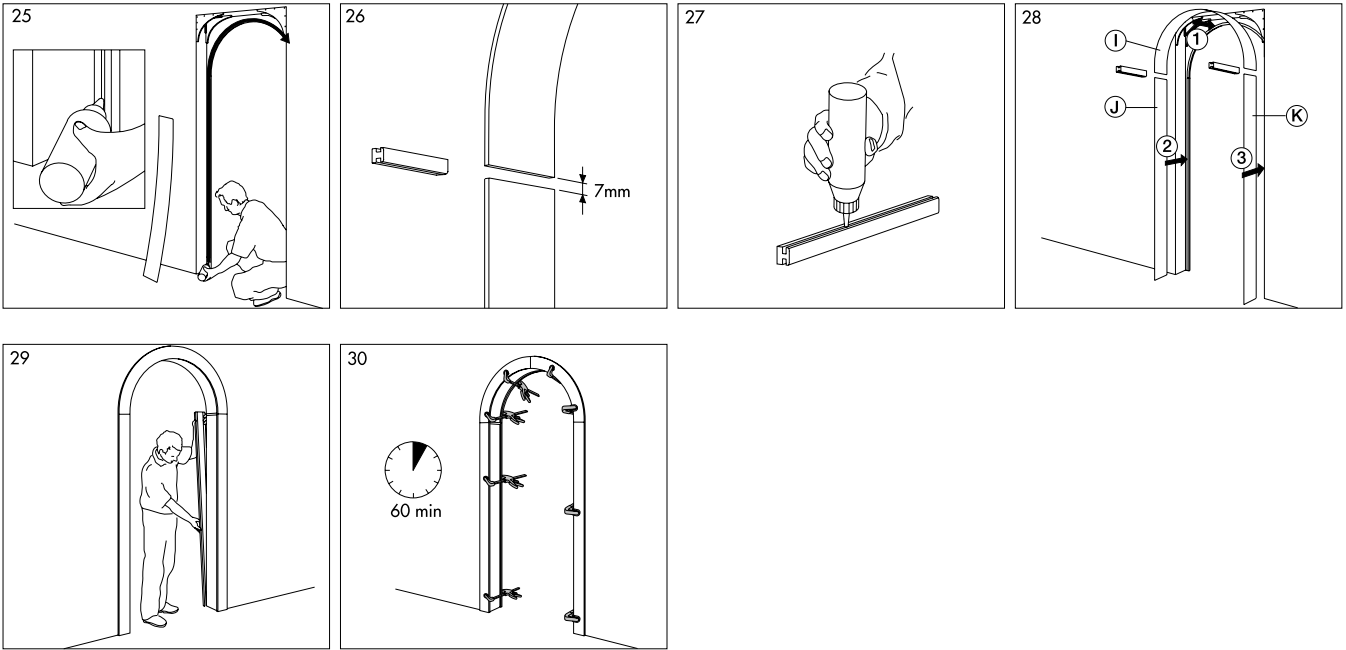







# Milano 2000

Reviderad 03 02 24

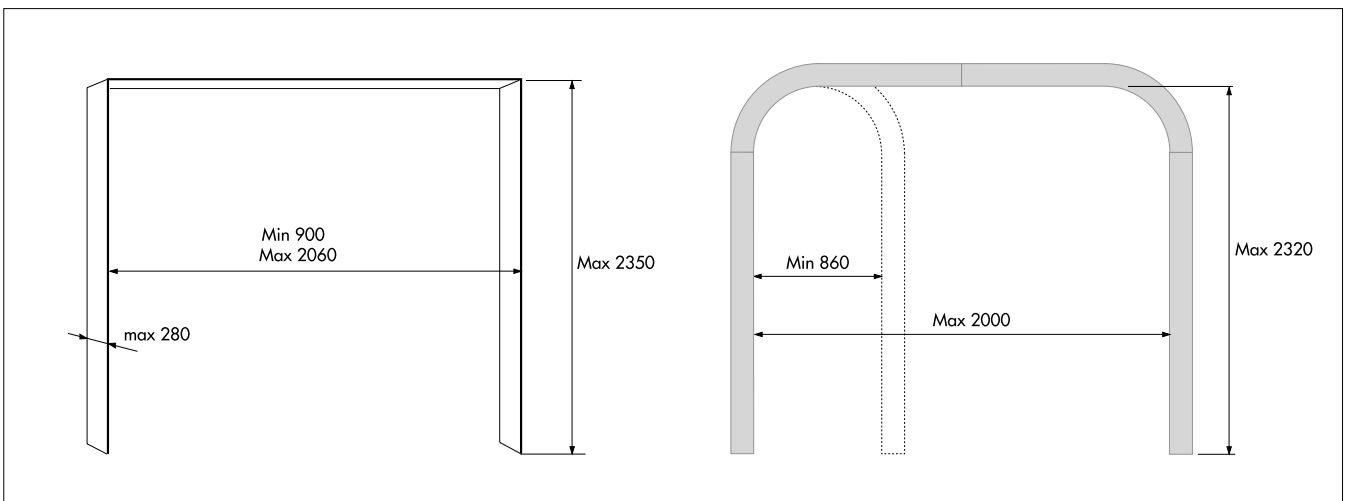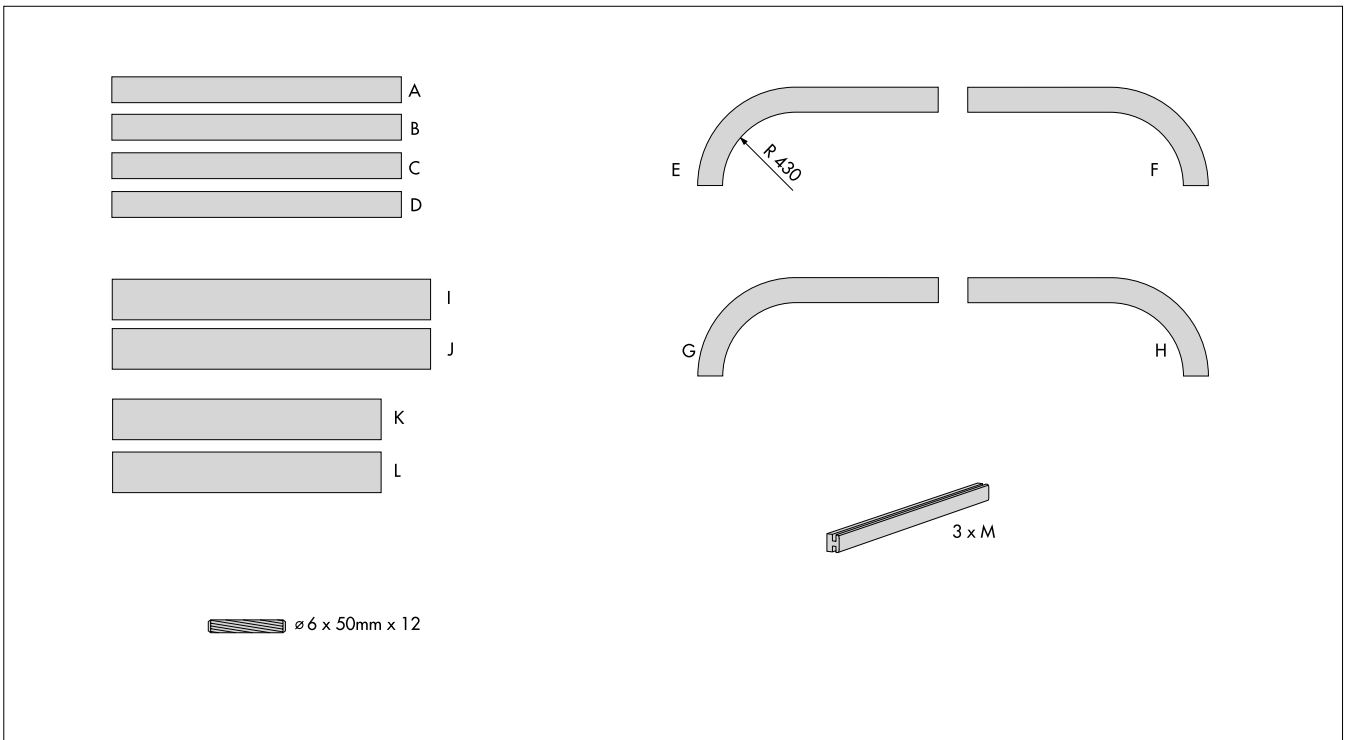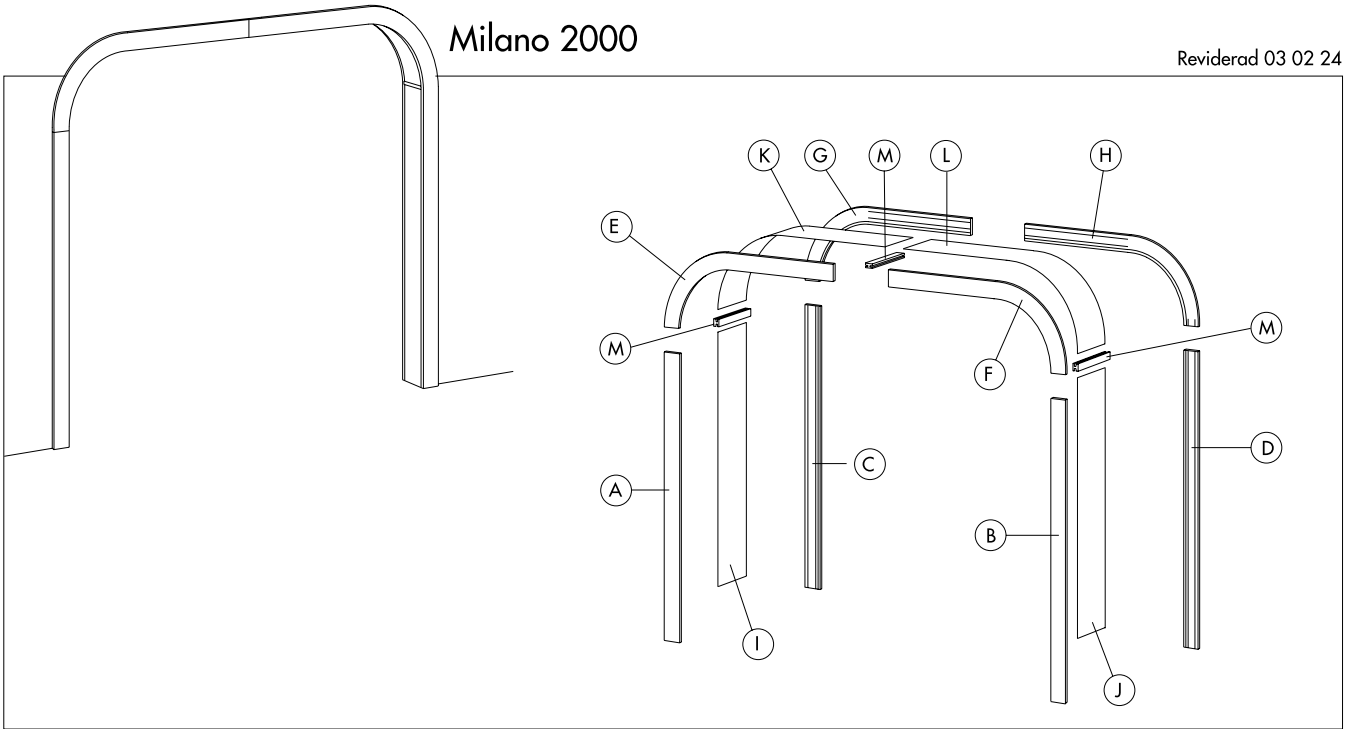

 = mm

# Milano 2000

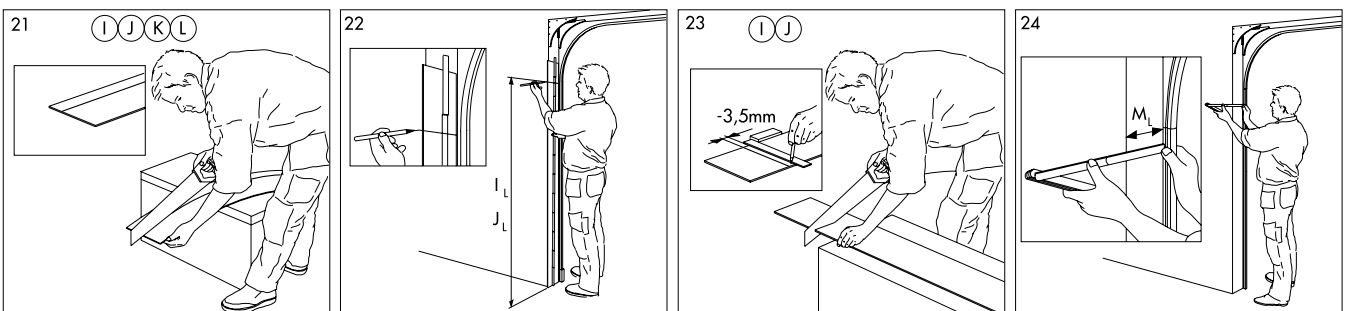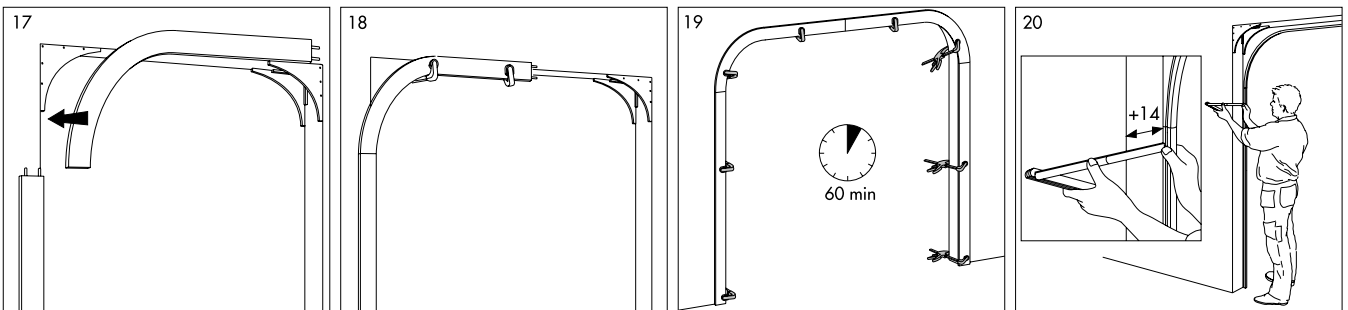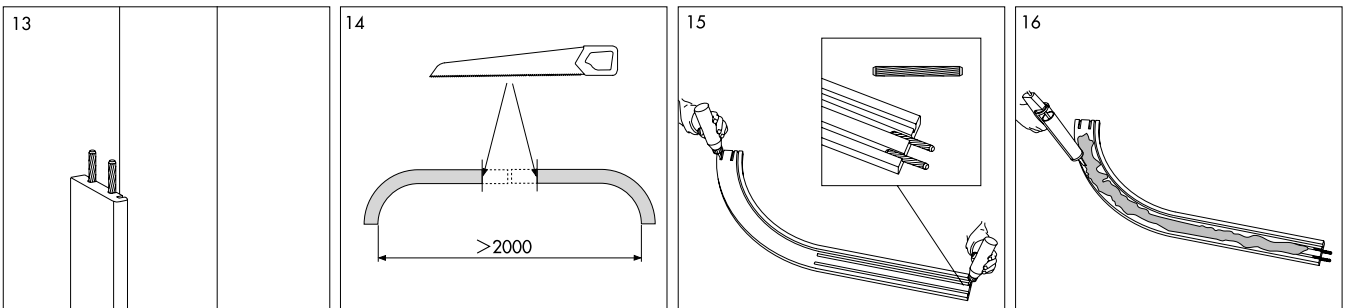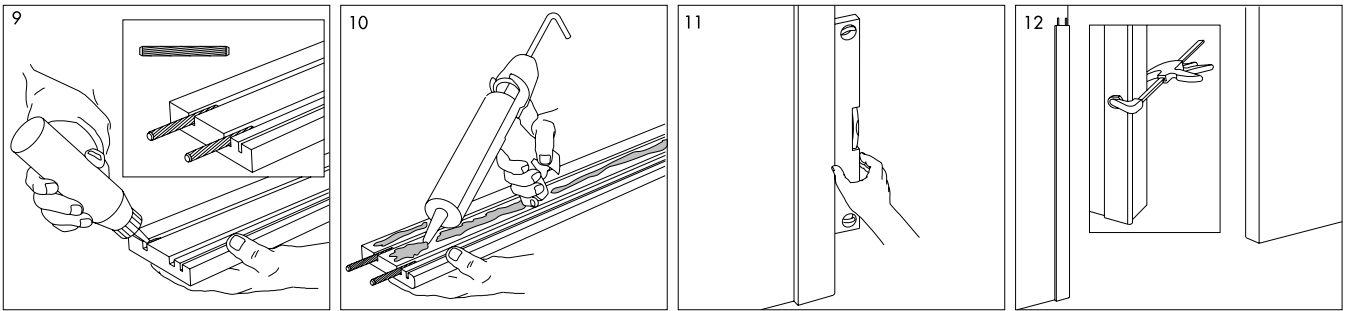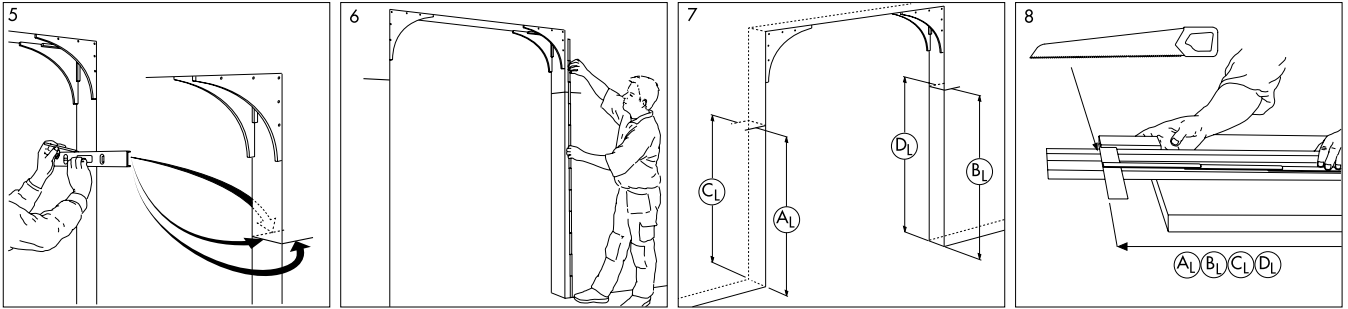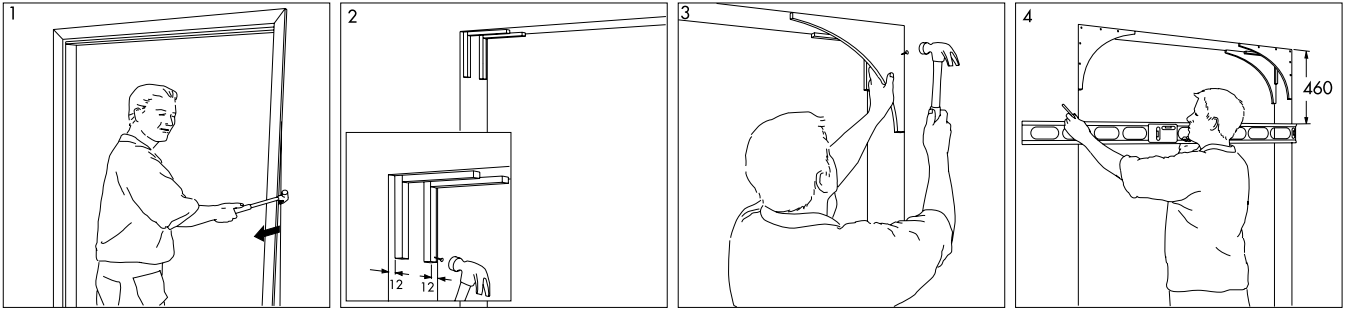

# Milano 2000

